


Installing Sensor Tube Extender instructions

I. General introduction

- Sensor extender tubes (SP-EXT tube) are used for oil tanks with a large height (from 2000 mm to 6000 mm). The use of connecting tube allows carrying the sensor to the installation location easier and less costly.

Types of fuel sensor tubes:

No	Part Number	Descriptions
1	SP-EXT10	Sensor extender tubes for SP series, length 1000mm
2	SP-EXT15	Sensor extender tubes for SP series, length 1500mm

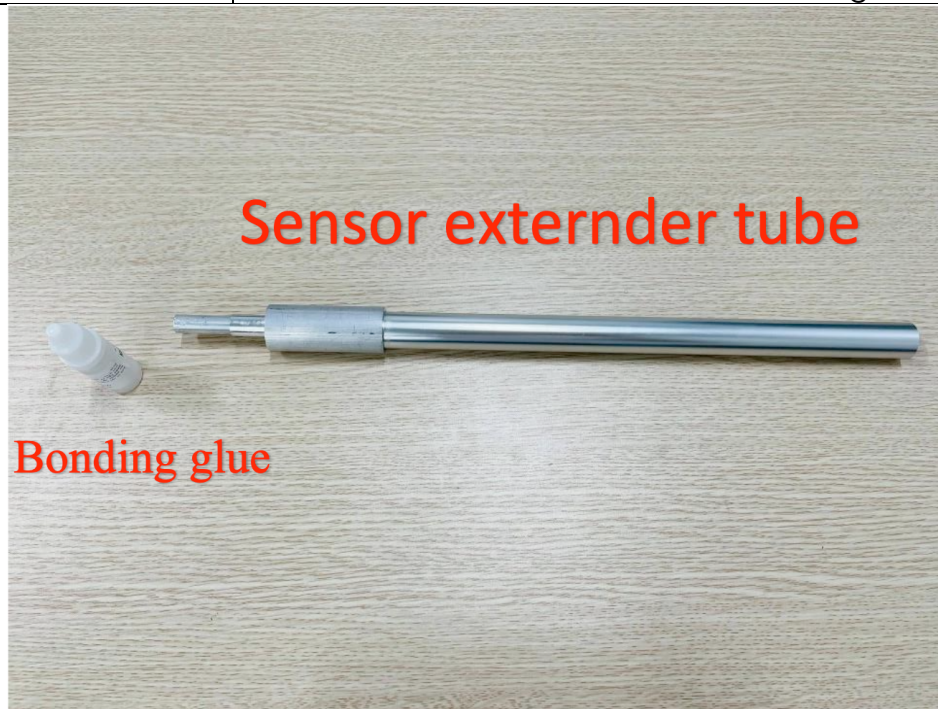


Picture 1: Sensor extender tubes and accessories

II. How to install the tube to the sensor

- Step 1: Clean the tube to be connected's outer surface.
- Step 2: Apply glue on the tube to be installed, **making sure that it is evenly distributed to guarantee optimum adherence.**



Picture 2: Apply glue on the inner

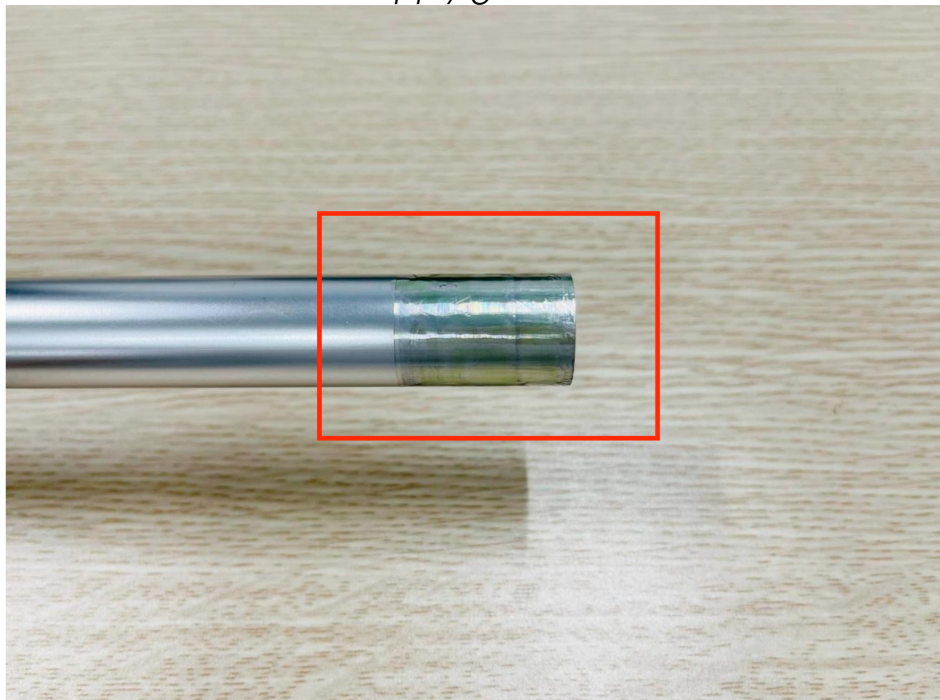

Picture 3: Apply glue to outer tube

- Step 3: Once the extenders are complete, wait at least 30 minutes to adjust the connection positions before installing the sensor into the tank.



Picture 4: Installing the extender tube to sensor



Picture 5: Sensor extender tubes installed completely and wait at least 30 minutes before install to the tank