

INSTRUCTION FOR INSTALLING SENSOR TUBE EXTENDERS

I. General introduction


Sensor tube extenders (SP-EXT) are used for oil tanks with a large height (from 2000 mm to 6000 mm). Using connecting tubes helps bring the sensor to the installation point more easily and at lower cost..

Types of fuel sensor tubes:

No	Part Number	Description
1	SP-EXT10	Sensor tube extenders for SP series, length 1000mm
2	SP-EXT15	Sensor tube extenders for SP series, length 1500mm

Picture 1: Sensor tube extenders and accessories

II. How to install the tube extender to the sensor

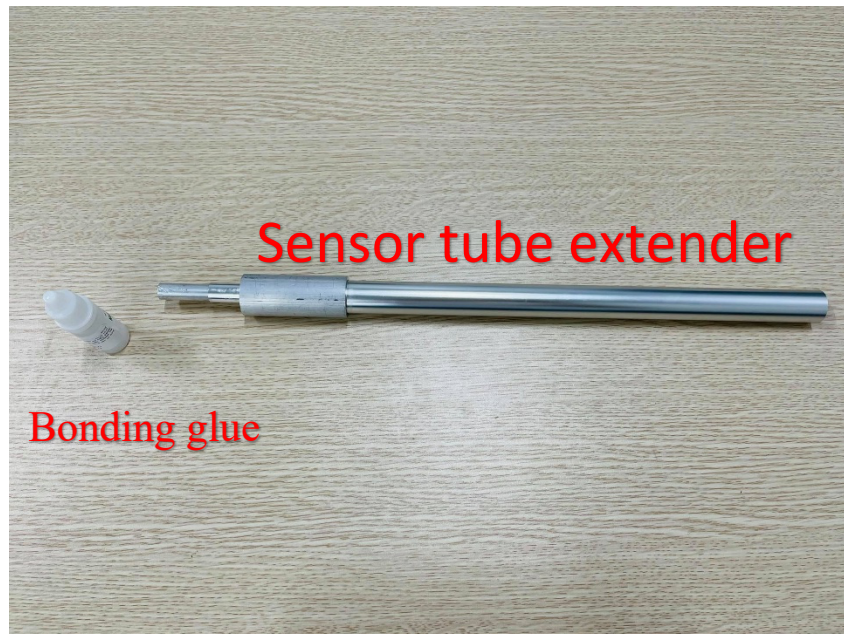

Step 1: Clean the outer surface of the tube to be connected.

Step 2: Apply glue on the tube to be installed, **making sure that it is evenly distributed to guarantee optimum adherence.**



Picture 2: Apply glue on the inner tube



Picture 3: Apply glue to outer tube

Step 3: Once the extenders are assembled, wait at least 30 minutes before adjusting the connection positions and installing the sensor into the tank.



Picture 4: Installing the tube extender to sensor tube



Picture 5: Sensor tube extenders installed completely and wait at least 30 minutes before install to the tank